SCOSCHE® **VO4149B**

IN-DASH INSTALLATION KIT FOR 2001-04 VOLVO S60/V70 VEHICLES

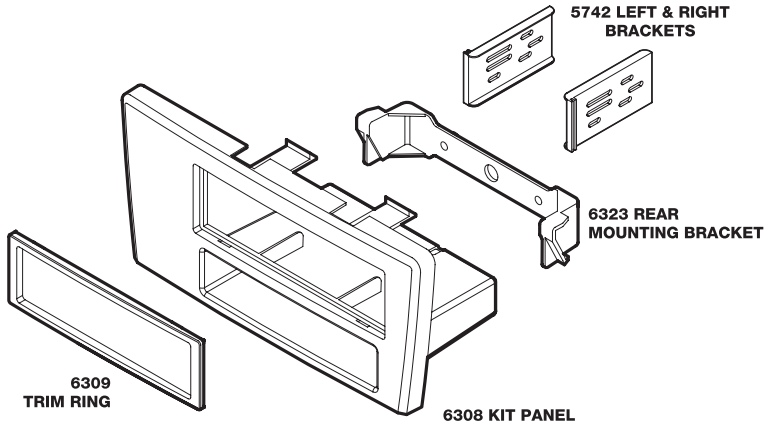

INTRODUCTION / PRELIMINARY

This premium installation kit is for 2001-04 VOLVO S60/V70 vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION:
Disconnect your vehicle's negative battery terminal before the installation to help prevent electrical damage. We recommend the use of a volt/ohm meter over a test light to check wiring. A test light or grounded wire probe can cause damage to the vehicle's computer and/or diagnostic systems. Avoid all factory airbag wiring as airbags can accidentally deploy causing serious injury or death.

NOTES:
- See your vehicle's instructions for any special tools your installation may require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS
PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

VO03 2000-UP VOLVO	**VOAB** 1999-UP VOLVO S80 Antenna Adapter

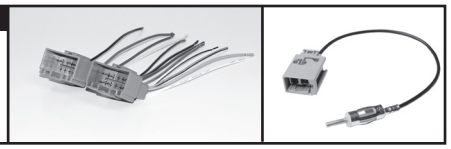

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (VO4149B) in 2001-04 VOLVO S60/V70 vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

© 2007 SCOSCHE INDUSTRIES, INC.

SI 06/07 - VO4149B (3000003)

RADIO REMOVAL

2001-04 VOLVO S60/V70
RADIO REMOVAL:

1. Carefully pry out and remove small filler piece located below the air conditioning controls and around shifter.
2. Locate and extract (2) T-25 torx at the bottom of air conditioning assembly.
3. Pry A/C assembly straight out from each top corner. Be careful as area surrounding is soft.
4. Extract (2) T-25 torx securing radio bracket, unplug and remove.
5. Extract (5) T-25 torx screws holding radio to radio mount housing bracket. Remove radio from housing bracket and retain housing.The housing bracket is necessary to mount new radio. (See kit assembly illustration below).

MOUNTING THE RADIO

DIN-MOUNT

1. Slide DIN sleeve into kit panel from front and bend tabs.
2. Insert radio into sleeve until it snaps into place.
3. Snap trim ring in place.

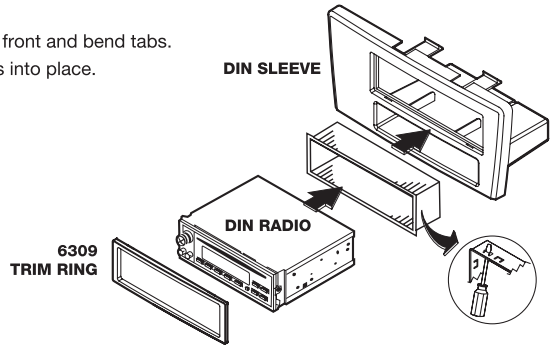

DIN ISO MOUNT

1. Align right side of ISO mounting bracket 5742R and left side ISO mounting bracket 5742L with kit panel 6308.
2. Align ISO DIN radio. Use hardware supplied with radio to bolt the 5742 mounting brackets.
3. Snap trim ring in place.

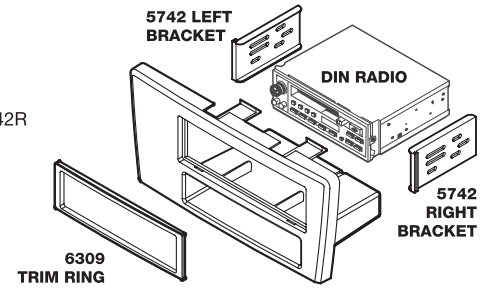

KIT ASSEMBLY

KIT ASSEMBLY

1. Slide kit into metal factory radio housing bracket. (Refer to radio removal section above).
2. Screw rear support bracket to kit using supplied screws to secure factory radio housing bracket.
3. When installing kit assembly into dash, make sure top of factory radio housing fits snugly to upper radio opening.